



ES9060P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	LOCK NUT	31	BALL BEARING
2	HEX SOCKET SCREW	32	ARMATURE
3	BOTTOM PUNCHING DIE	33	BALL BEARING 607-2Z
4	BLANKING ROD	34	LABYRINTH RUBBER RING
5	COPPER WASHER	35	TAPPING SCREW
6	PUNCHING NEEDLE	36	STATOR
7	PUNCHING NEEDLE HOLDER	37	GLASS FIBRE TUBE
8	HEX SOCKET CLAMPING SCREW	38	CONNECTION BUTTON
9	TAPPING SCREW	39	CONNECTION BUTTON
10	HEAD CASE	40	INDUCTOR
11	BALL BEARING 608-2Z	41	TENSION SPRING
12	COPPER WASHER	42	MOTOR HOUSING
13	RETAINING OIL BEARING	43	BRUSH HOLDER CAP
14	NEEDLE BEARING	44	CARBON BRUSHES
15	CONNECTING ROD	45	BRUSH HOLDER
16	CRANK SHAFT	46	SWITCH BUTTON
17	STEEL BALL	47	SWITCH BAR
18	SPUR GEAR	48	SWITCH SPRING
19	NEEDLE BEARING HK0810	49	"CROSS" TAPPING SCREW ST4.2X16
20	NEEDLE BEARING HK0609	50	STRAIN RELIEF
21	STOPPER	51	TERMINAL BLOCK
22	STUD	52	SWITCH STAND
23	BLOCK STAMP	53	CAPACITOR
24	PIN	54	SWITCH
25	COPPER WASHER	55	REAR COVER
26	MILD GEAR SPINDLE	56	TAPPING SCREW
27	BIG GEAR	57	CORD GUARD
28	CYLINDRIC PIN	58	CORD
29	MIDDLE COVER	59	OPENING WRENCH
30	BAFFLE PLATE	60	SOCKET HEX WRENCH

ST20120201